Field Splice Kit – FSK

Quick Start Guide

Easy Inline 3-Wire Splice Connection with NextSeal™ Waterproof Technology

1) Insert stripped wire-ends into connector and secure.

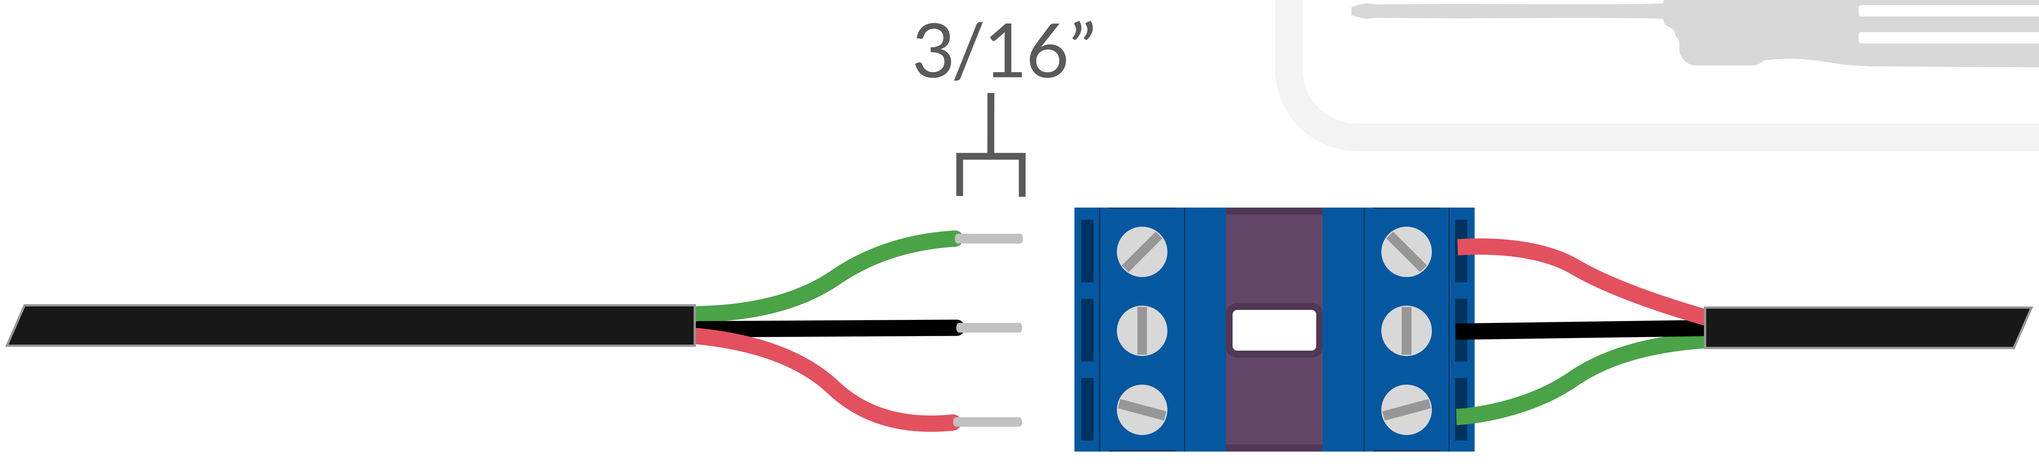

2) Place connector on center post and align cables into groves.

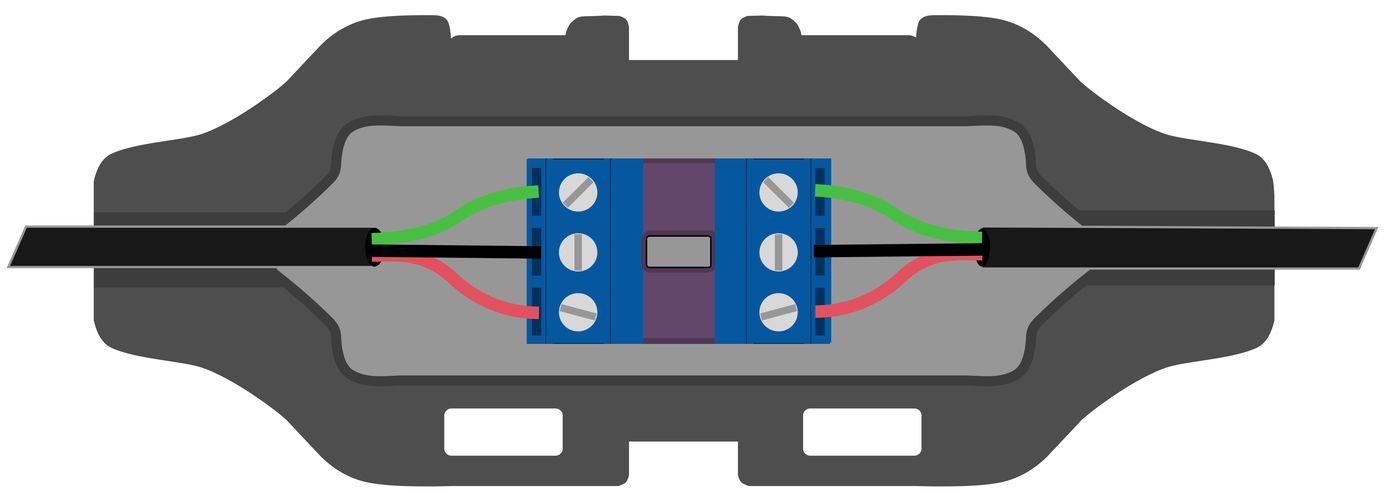

3) Align the top and bottom halves and press together.

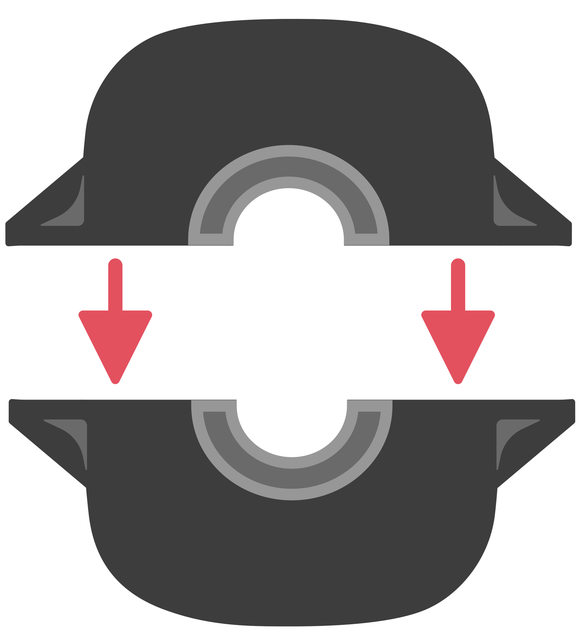

4) Ensure all clips are engaged and apply angled pressure as needed.

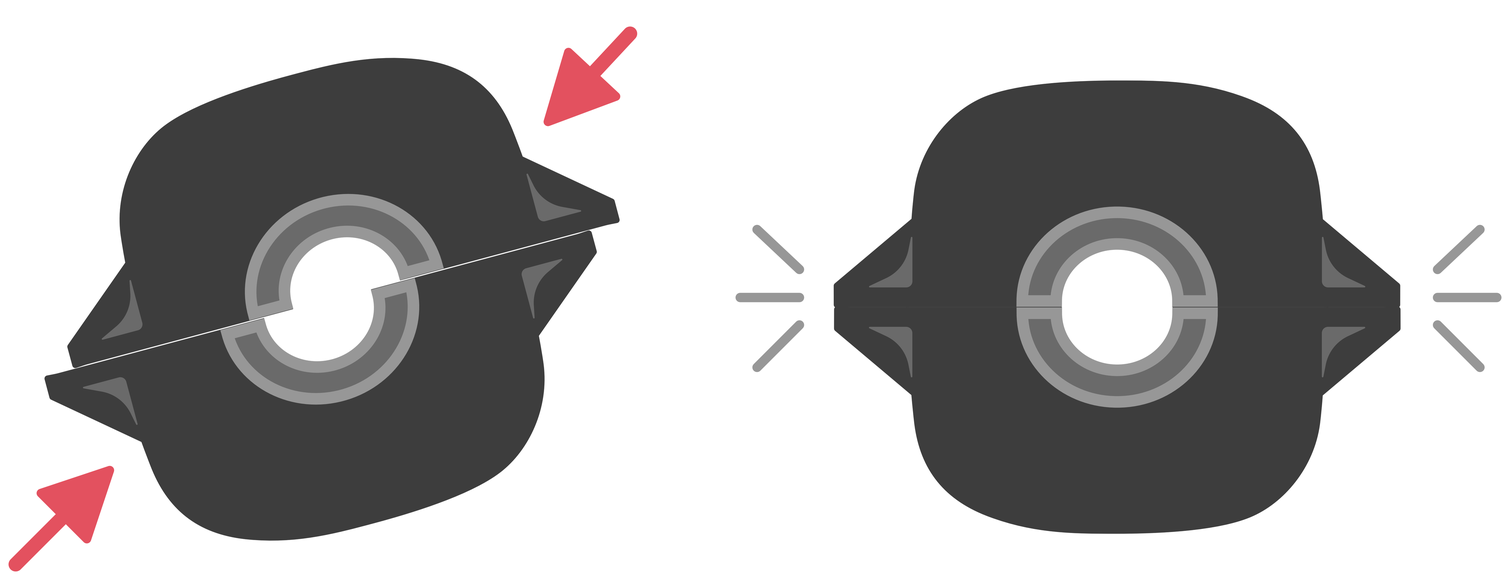

NEXT METERS

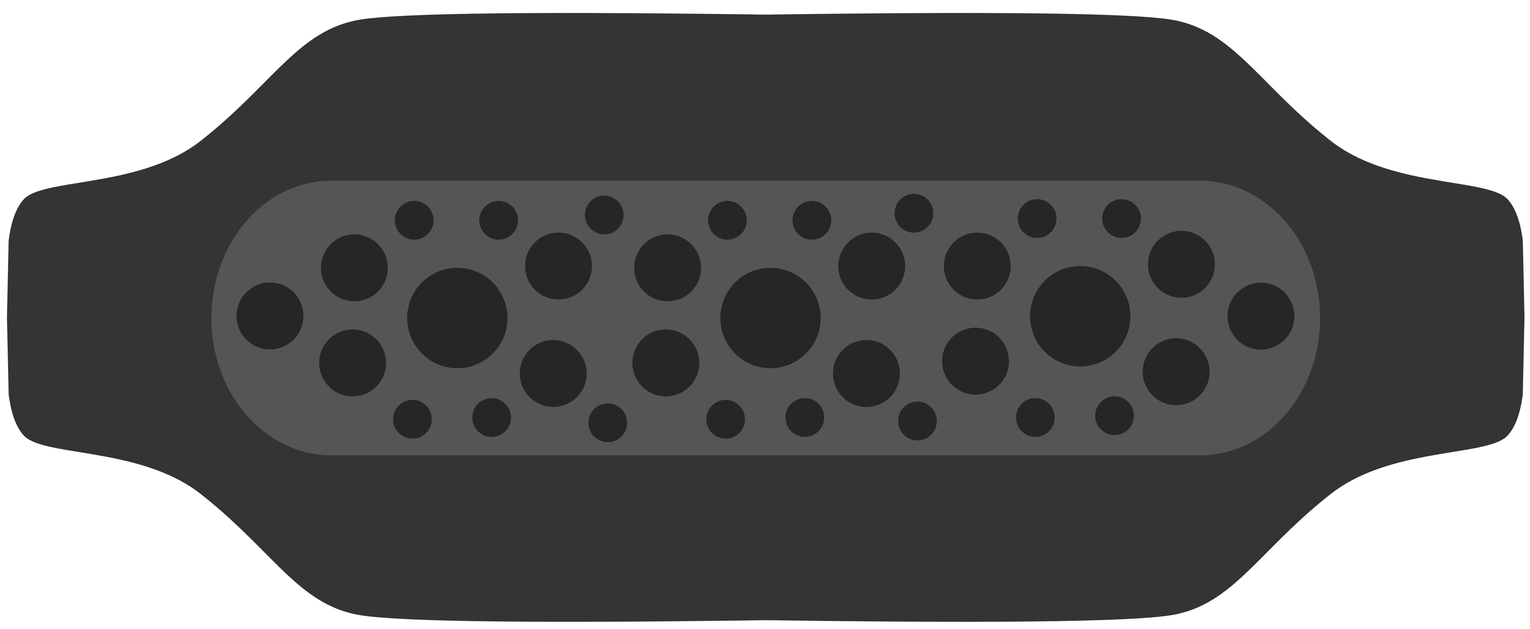

Field Splice Kit

For additional resources, please visit: products.nextmeters.com/fsk

Contact Information
Phone: 844.538.8203
Email: support@nextmeters.com